

**Instructions for Installation of
Silicon Labs USB-to-UART Bridge Virtual COM Port Driver
for Windows-10.**

**Leland Berkwits, MD
KM4FYR**


2/24/2022

Driver Download Site from Silicon Labs:


<https://www.silabs.com/developers/usb-to-uart-bridge-vcp-drivers>

STEP 1 – Open Device Manager

Type Device Manager into Search Box and hit <RETURN>

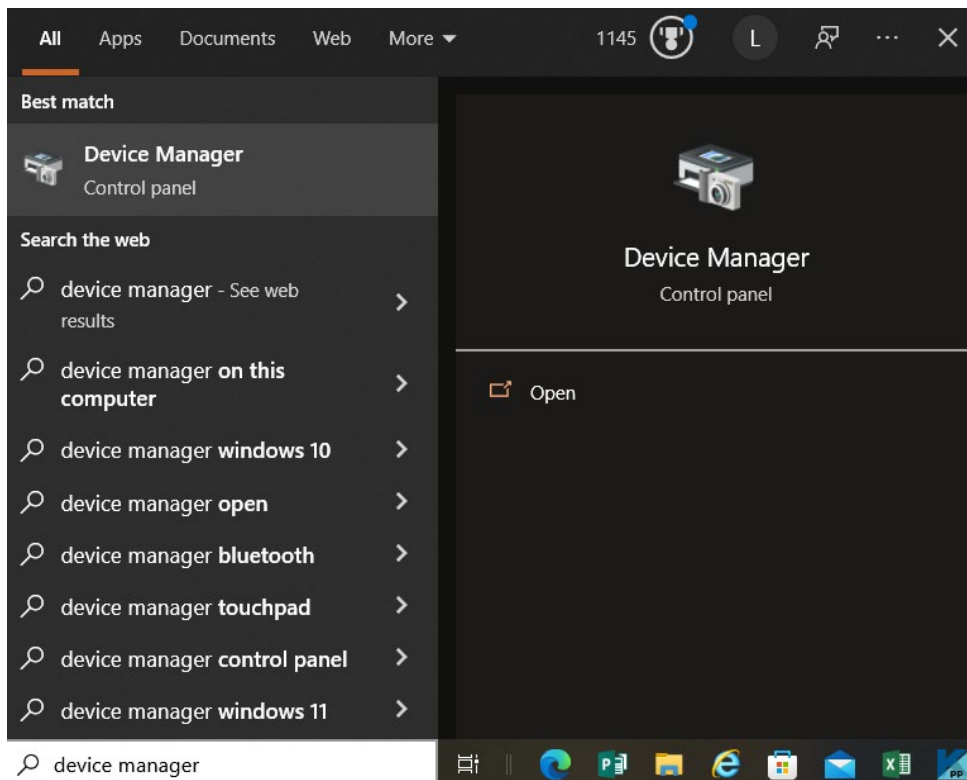


Look for CP2102 USB to UART Bridge Controller under Other Devices:

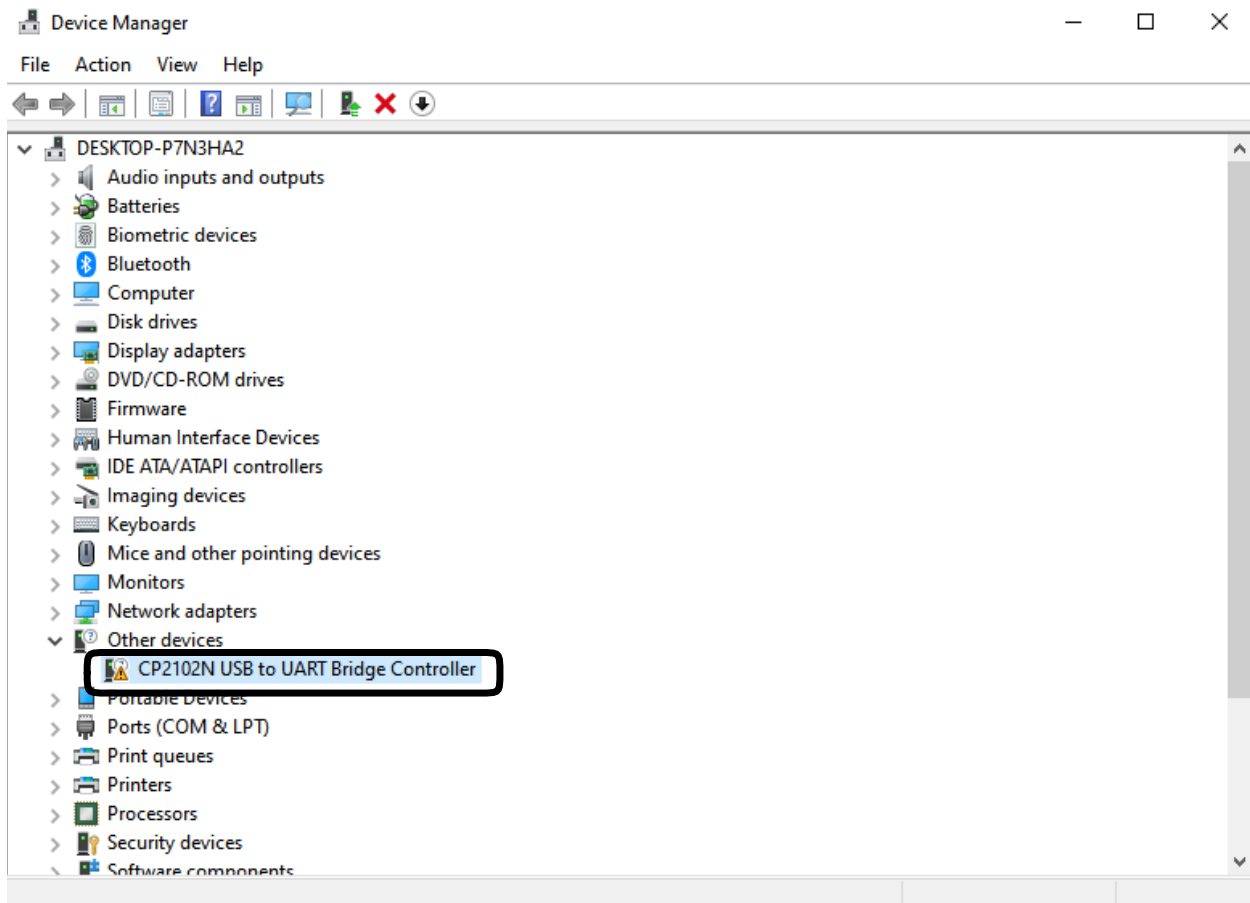


STEP 2: Open Properties

RIGHT Click on CP2102 USB to UART Bridge Controller and then Select Properties

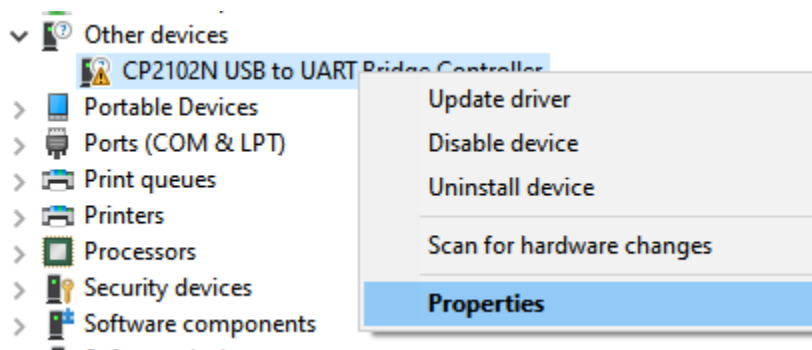

STEP 3: Confirm Silicon Labs Driver has not been installed by selecting Driver Tab

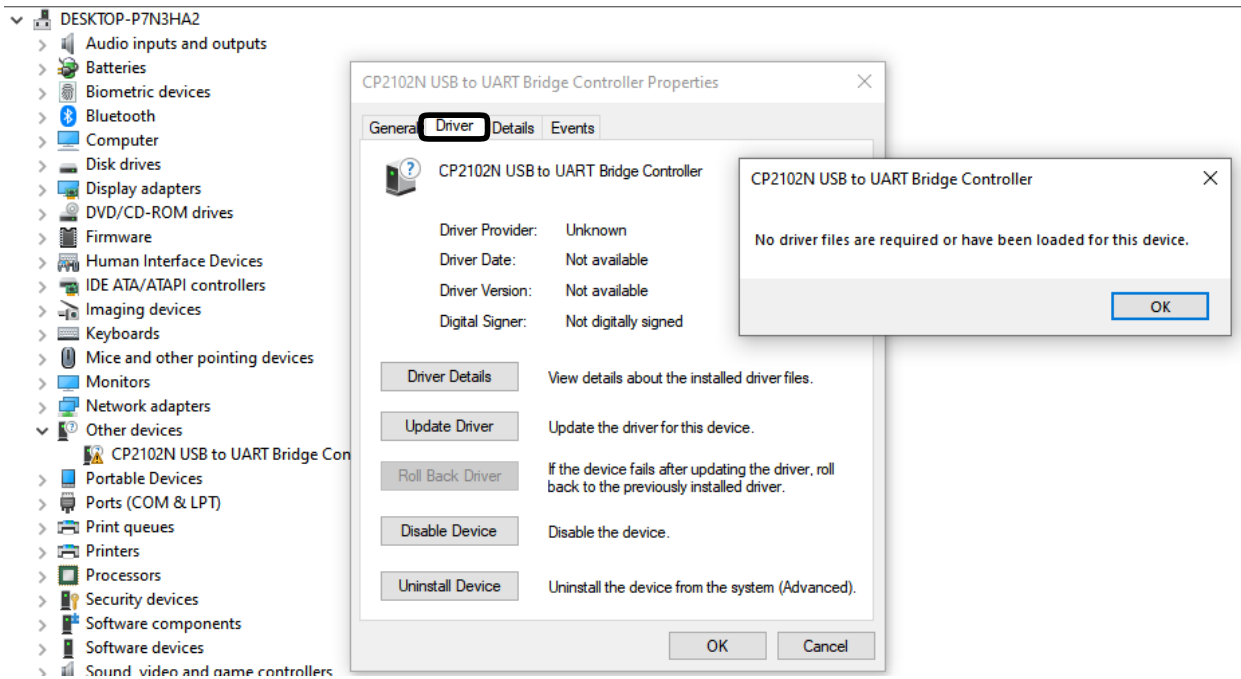

STEP 4: Download Driver Package from Silicon Labs Site

<https://www.silabs.com/developers/usb-to-uart-bridge-vcp-drivers>

Download and Install VCP Drivers

Downloads for Windows, Macintosh, Linux and Android below.

*Note: The Linux 3.x.x and 4.x.x version of the driver is maintained in the current Linux 3.x.x and 4.x.x tree at www.kernel.org.

Software Downloads



Software (11)

Software • 11

CP210x Universal Windows Driver	v11.0.0 11/17/2021
CP210x VCP Mac OSX Driver	v6.0.2 10/26/2021
CP210x VCP Windows	v6.7 9/3/2020
CP210x Windows Drivers	v6.7.6 9/3/2020
CP210x Windows Drivers with Serial Enumerator	v6.7.6 9/3/2020


Show 6 more Software

STEP 5: Confirm .ZIP file has been Downloaded

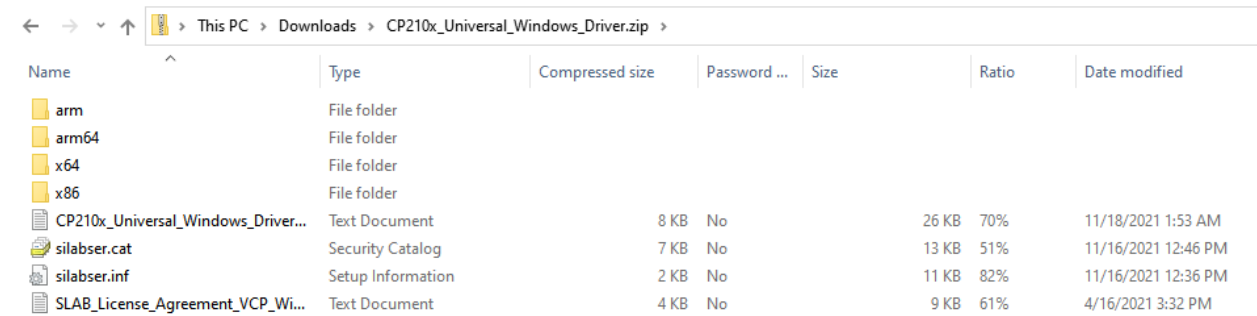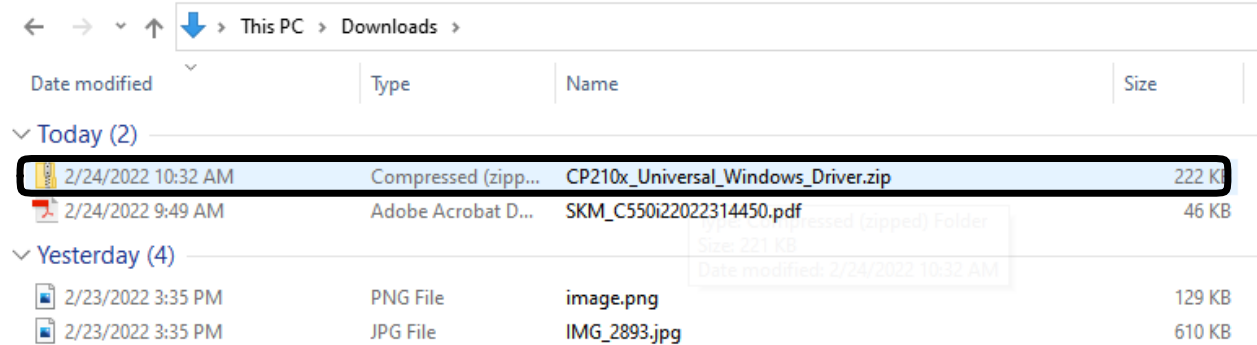


STEP 6: Extract ZIP file by <RIGHT-Clicking>


CP210x Universal Windows Driver.zip and selecting **Extract All...**

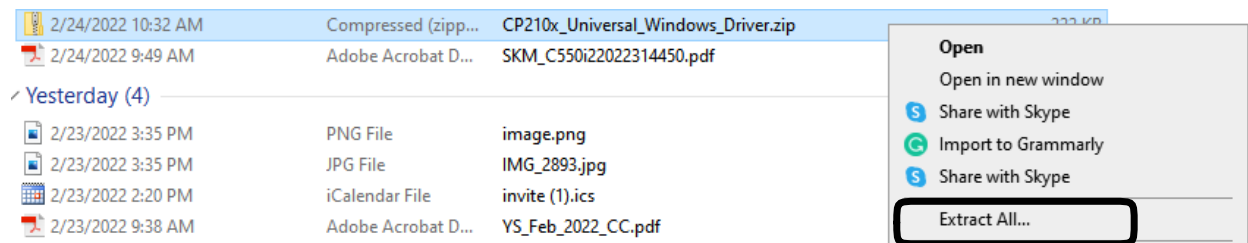


Extracted driver files will be available under folder without .ZIP extension

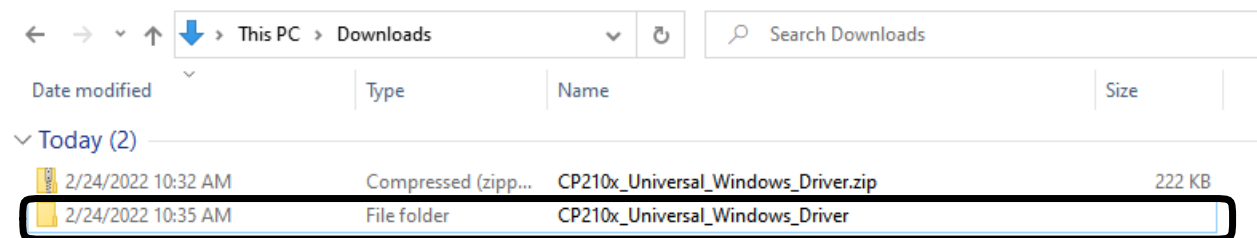

STEP 7: Open Windows Device Manager, <RIGHT-Click> CP2102 USB to UART Bridge Controller

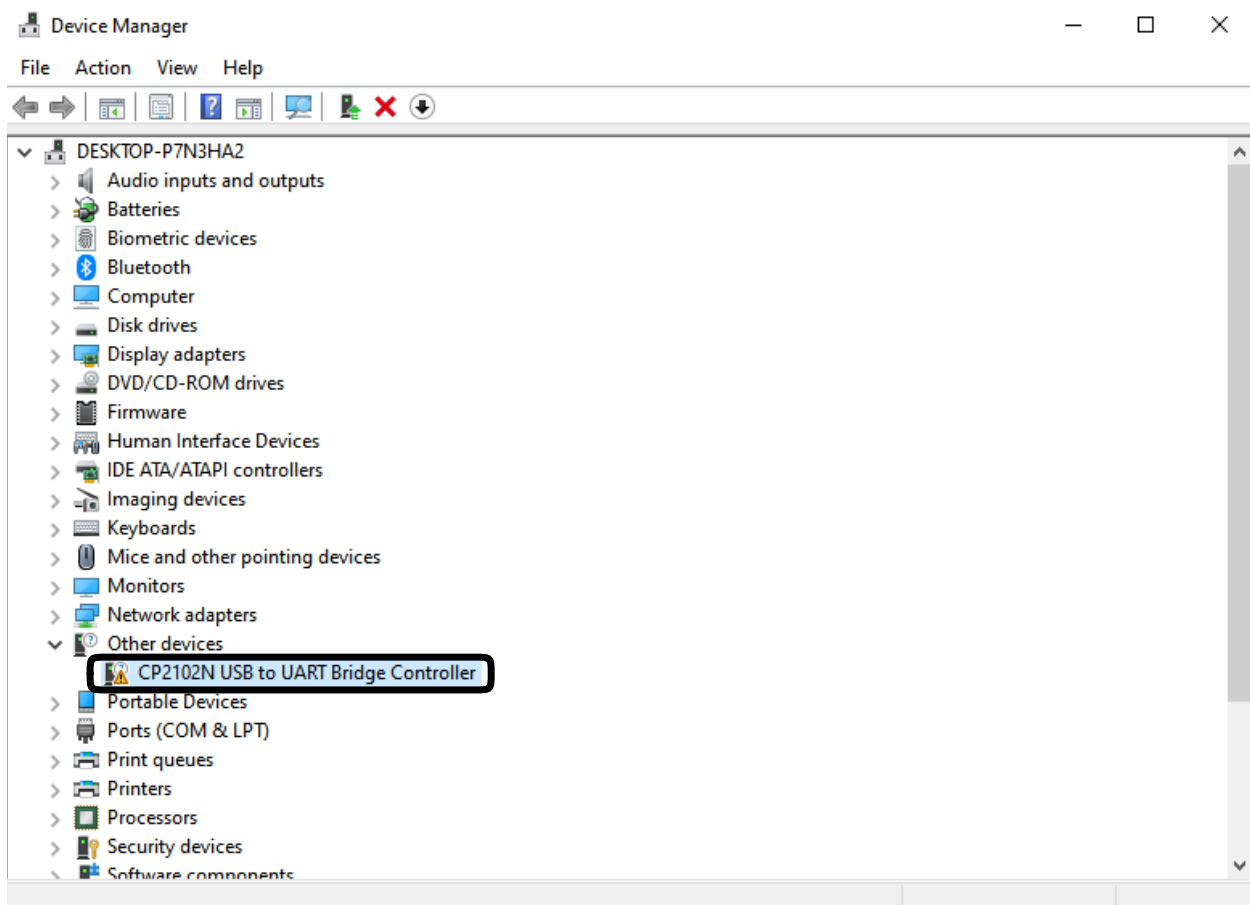

STEP 8: Select Update Driver

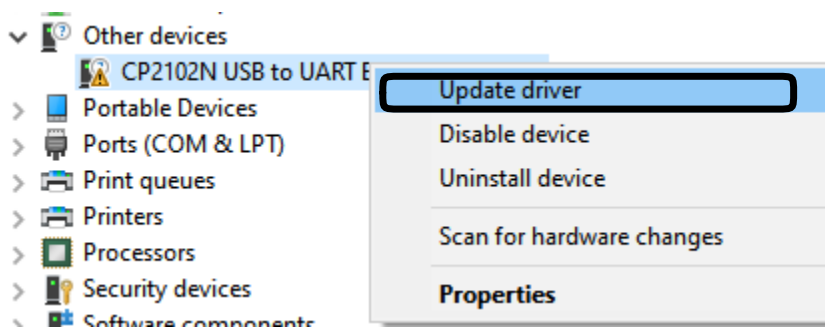

STEP 9: Select “Browse my computer for drivers”

← Update Drivers - CP2102N USB to UART Bridge Controller

How do you want to search for drivers?


→ Search automatically for drivers

Windows will search your computer for the best available driver and install it on your device.


→ Browse my computer for drivers

Locate and install a driver manually.


Redirect the driver installer to the Downloads Folder where the Silicon Labs Driver is located, and select CP210x Universal Windows Driver... then click OK

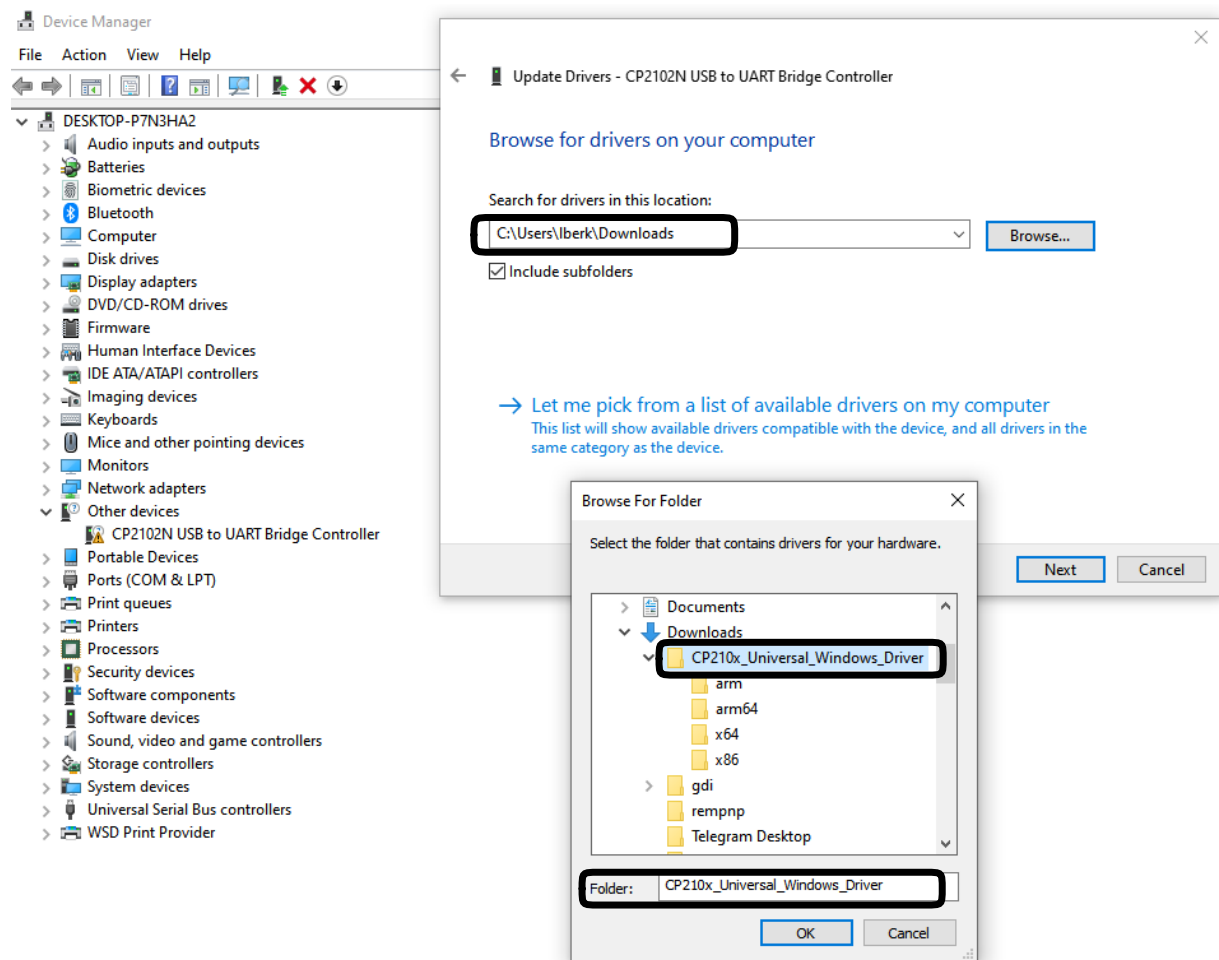

Dialog Box will display confirming installation of Silicon Labs CP210x USB to UART bridge.

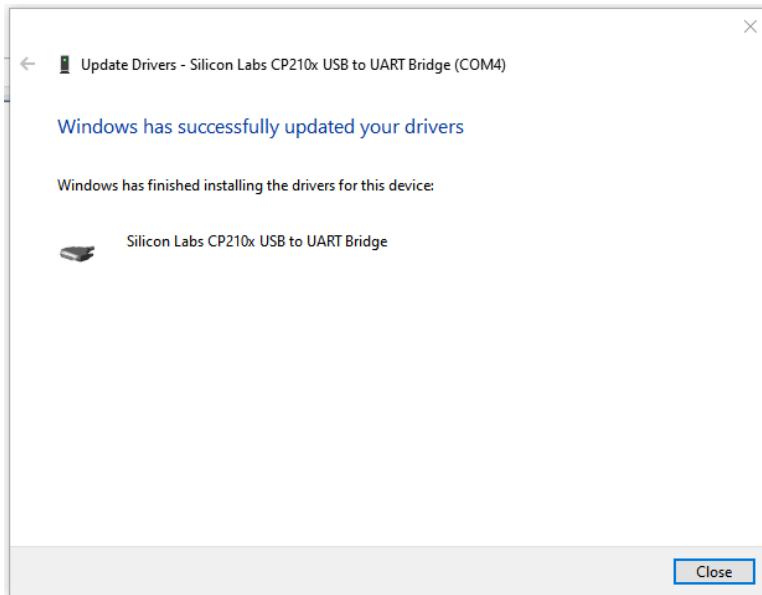


Open Device Manager

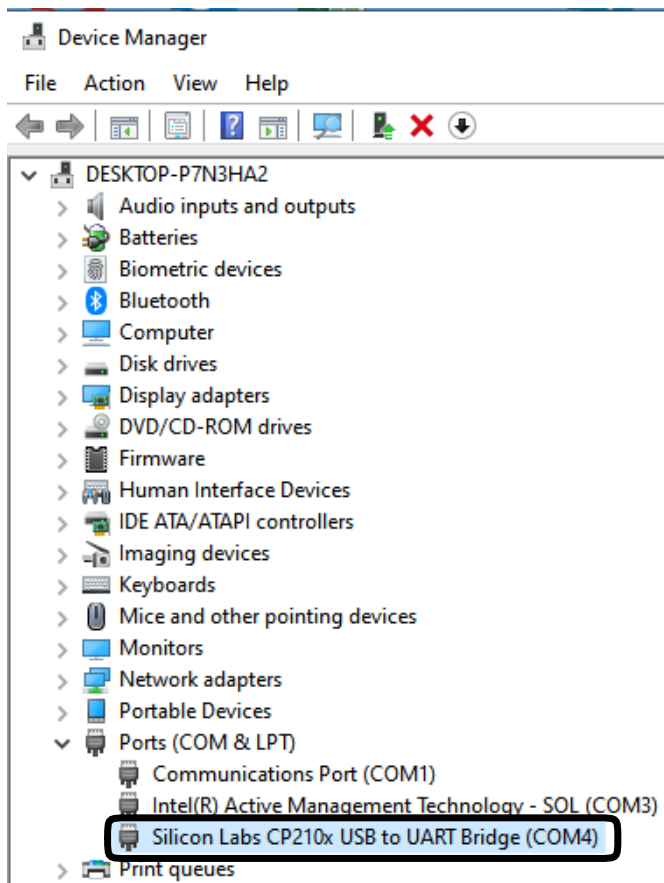

Confirm Driver Installation by Clicking on Driver Tab

Each installation **MAY** use a different COM port depending on hardware already installed in computer: **(NOTE THIS INSTALLATION USES COM4)**

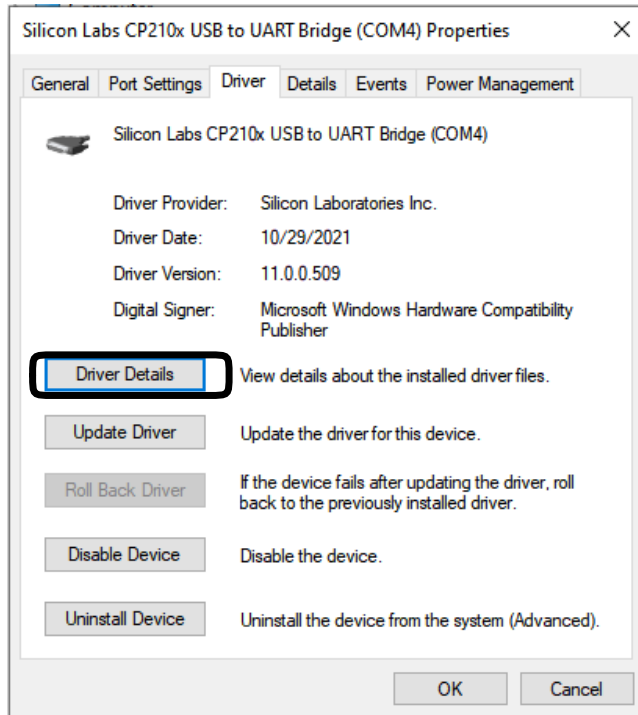

Default Configuration may be made under Port Settings tab.

